

Relative and absolute pressure transmitter type 527 for shipbuilding

Pressure range
0 ... 1 – 60 bar



The compact type 527 pressure transmitter is based upon the well proven ceramic technology developed by Huba Control over 20 years ago.

These transmitters are suitable for applications across a broad spectrum of industries and shipbuilding.

- Compact, rugged construction
- Negligible temperature influence on accuracy
- Certified for shipbuilding with:
 - Germanischer Lloyd
 - American Bureau of Shipping
 - Bureau Veritas
 - Det Norske Veritas
 - Lloyd's Register

Technical overview

Pressure range

Relative	0 – 60 bar
Absolute	0 ... 1 – 16 bar

Operating conditions

Medium	Liquids and gases	
Temperature	Medium	FPM -15 ... +125 °C (⊕) -15 ... +120 °C
		EPDM -40 ... +125 °C (⊕) -30 ... +120 °C
		NBR -20 ... +100 °C
Ambient	-30 ... +85 °C	(⊕) -25 ... +85 °C
Tolerable overload / Rupture pressure	Storage	-50 ... +100 °C
	≤ 4 bar	3.0 x fs
> 4 bar	2.5 x fs	

Materials

Cover	Stainless steel 1.4404 / AISI 316L	
Plug accommodation	Polyarylamid 50% GF UL 94 V-0	
Materials in contact with medium	Pressure connection	Stainless steel 1.4404 / AISI 316L
	Sensor	Ceramic Al ₂ O ₃ (96%)
	Sealing material	FPM, EPDM, NBR

Electrical overview

	Output	Power supply	Load	Current consumption
2 wire	4 ... 20 mA	7 ... 33 VDC	< $\frac{\text{supply voltage} - 7V}{0.02 A}$ [Ohm]	< 23 mA
3 wire	(⊕) 4 ... 20 mA	10 ... 30 VDC	< $\frac{\text{supply voltage} - 10V}{0.02 A}$ [Ohm]	< 23 mA
	0 ... 10 V	12 ... 33 VDC	> 10 kOhm / < 100 nF	< 7 mA
Polarity reversal protection	Short circuit proof and protected against polarity reversal. Each connection is protected against crossover up to max. supply voltage.			

Dynamic response

Response time	< 2 ms, 1 ms typ.
Load cycle	< 100 Hz

Electrical connection

Swift connector with or without cable 1.5 m (PVC spec.)	Protection standard	Protection class
Connector DIN EN 175301-803-A	IP 67	III
Connector M12x1	IP 65	III
	IP 67	III

Pressure connection

Inside thread	$\frac{7}{16}$ - 20 UNF	sealing cone	
	$\frac{1}{2}$ - 14 NPT		
Outside thread	$\frac{7}{16}$ - 20 UNF	sealed at back DIN 3852-E with Profile seal ring in FPM (-30 ... +135 °C)	
	$\frac{1}{4}$ - 18 NPT		
	G $\frac{3}{4}$		sealed at back and manometer (combi) with Profile seal ring in FPM (-30 ... +135 °C)
	G $\frac{1}{2}$		sealed at front and manometer (combi)
	M20x1.5		sealed at front
	G $\frac{1}{2}$		

Installation arrangement

Unrestricted	Recommendation: Pressure connection facing downwards
--------------	---

Tests / Admissions

Electromagnetic compatibility	CE conformity acc. EN 61326-2-3
Shock acc. IEC IEC 68-2-27	100 g, 11 ms half sine wave, all 6 directions, free fall from 1 m on concrete (6x)
Constant shock acc. IEC 68-2-29	40 g for 6 ms, 1000x all 3 directions
Vibration acc. IEC 68-2-6	20 g, 15 ... 2000 Hz, 15 ... 25 Hz with amplitude ± 15 mm, 1 Octave/min. all 3 directions, 50 constant load
Shipbuilding	Germanischer Lloyd
	American Bureau of Shipping
	Bureau Veritas
	Det Norske Veritas
EAC	Lloyd's Register

Protection against explosion (⊕)

	4 ... 20 mA
Intrinsic safety «i» (with current output only)	Ex II 1/2 G Ex ia IIC T4 Ga/Gb Ex II 1/2 D Ex ia IIIC T125°C Da/Db
EC type examination certificate	SEV 10 ATEX 0145
Connection to certified intrinsically safe resistive circuits with maximum values	U _i = 30 VDC; I _i = 100 mA = P _i = 0.75 W
Effective internal inductance and capacitance for versions with plugs complying with EN 175301-803 or M12x1	L _i = 0 nH; C _i = 0 nF
IECEx	SEV 16.0007

Weight

~ 90 g

Packaging (Please state on order)

Single packaging in cardboard	accessories integrated
Multiple packaging in cardboard (25 pcs)	

Accuracy

Parameter		Unit	
Characteristic line ¹⁾		% fs	± 0.3
Resolution		% fs	0.1
Thermal characteristic ²⁾	max.	% fs/10K	± 0.2
Long term stability acc. IEC EN 60770-1	max.	% fs	± 0.25

Test conditions: 25 °C, 45% RH, power supply 24 VDC

¹⁾ typ. ; max. 0.5% fs (incl. zero point, full scale, linearity, hysteresis and repeatability) ²⁾ -15 ... 85 °C

		1	2	3	4	5	6	7	8	9	10	11	
Order code selection in bar		527. X X X X X X X X X X X X											
Pressure mode	Relative	9											
	Absolute	8											
Pressure range ¹⁾	0 ... 1 bar		1	1									
	0 ... 1.6 bar		1	2									
	0 ... 2.5 bar		1	4									
	0 ... 4 bar		1	5									
	0 ... 6 bar		1	7									
	0 ... 10 bar		3	0									
	0 ... 16 bar		3	1									
	0 ... 25 bar	9	3	2									
	0 ... 40 bar	9	3	3									
	0 ... 60 bar	9	4	0									
Sealing material	FPM Fluoro elastomer					0	0						
	EPDM Ethylene propylene					1	0						
	NBR Butadiene Acrylonitrile					2	0						
Output / power supply	0 ... 10 V 12 ... 33 VDC							2					
	4 ... 20 mA 7 ... 33 VDC							3					
	10 ... 30 VDC Ex protection							4	1,3				
Electrical connection	Connector	DIN EN 175301-803-A ²⁾								1			
	M12x1 ²⁾	2w: IN=1 / OUT=3	3w: IN=1 / OUT=4 / GND=3							3			
	M12x1 ²⁾	2w: IN=1 / OUT=4	3w: IN=1 / OUT=3 / GND=4							M			
	Swift connector with cable 1.5 m									L			
Pressure connection	Inside thread	7/16 - 20 UNF								K	1	1	
		1/2 - 14 NPT								D	1	1	
	Outside thread	7/16 - 20 UNF									2	1	1
		1/4 - 18 NPT									3	1	1
		G 1/4 sealed at back DIN 3852-E with Profile seal ring in FPM									4	1	1
		G 1/2 sealed at back and manometer with Profile seal ring in FPM									8	1	1
		M20x1.5 sealed at front and manometer (combi)									E	1	1
G 1/2 sealed at front									9	1	1		
Pressure range variation (optional)	Indicate W and state range on order (e.g.: W0... + 3bar/OUT0...5V)												

		1	2	3	4	5	6	7	8	9	10	11	
Order code selection in psi		527. X X X X X X X X X X X X											
Pressure mode	Relative	9											
	Absolute	8											
Pressure range ¹⁾	0 ... 15 psi		B	1									
	0 ... 20 psi		B	2									
	0 ... 30 psi		B	4									
	0 ... 60 psi		B	5									
	0 ... 100 psi		B	7									
	0 ... 150 psi		C	0									
	0 ... 200 psi		C	1									
	0 ... 300 psi	9	C	2									
	0 ... 500 psi	9	C	3									
	0 ... 750 psi	9	D	0									
Sealing material	FPM Fluoro elastomer					0	0						
	EPDM Ethylene propylene					1	0						
	NBR Butadiene Acrylonitrile					2	0						
Output / power supply	0 ... 10 V 12 ... 33 VDC							2					
	4 ... 20 mA 7 ... 33 VDC							3					
	10 ... 30 VDC Ex protection							4	1,3				
Electrical connection	Connector	DIN EN 175301-803-A ²⁾								1			
	M12x1 ²⁾	2w: IN=1 / OUT=3	3w: IN=1 / OUT=4 / GND=3							3			
	M12x1 ²⁾	2w: IN=1 / OUT=4	3w: IN=1 / OUT=3 / GND=4							M			
	Swift connector with cable 1.5 m									L			
Pressure connection	Inside thread	7/16 - 20 UNF								K	1	1	
		1/2 - 14 NPT								D	1	1	
	Outside thread	7/16 - 20 UNF									2	1	1
		1/4 - 18 NPT									3	1	1
		G 1/4 sealed at back DIN 3852-E with Profile seal ring in FPM									4	1	1
		G 1/2 sealed at back and manometer with Profile seal ring in FPM									8	1	1
		M20x1.5 sealed at front and manometer (combi)									E	1	1
G 1/2 sealed at front									9	1	1		
Pressure range variation (optional)	Indicate W and state range on order (e.g.: W0... + 16psi/OUT0...5V)												


¹⁾ Other pressure ranges on request

²⁾ Delivery without female connector


Order code selection in MPa		1	2	3	4	5	6	7	8	9	10	11	
		527. X X X X X X X X X X X X											
Pressure mode	Relative	9											
	Absolute	8											
Pressure range ¹⁾	0 ... 0.1 MPa		G	1									
	0 ... 0.16 MPa		G	2									
	0 ... 0.25 MPa		G	4									
	0 ... 0.4 MPa		G	5									
	0 ... 0.6 MPa		G	7									
	0 ... 1 MPa		H	0									
	0 ... 1.6 MPa		H	1									
	0 ... 2.5 MPa	9	H	2									
	0 ... 4 MPa	9	H	3									
	0 ... 6 MPa	9	K	0									
Sealing material	FPM Fluoro elastomer					0	0						
	EPDM Ethylene propylene					1	0						
	NBR Butadiene Acrylonitrile					2	0						
Output / power supply	0 ... 10 V	12 ... 33 VDC						2					
	4 ... 20 mA	7 ... 33 VDC						3					
		10 ... 30 VDC Ex protection						4	1,3				
Electrical connection	Connector	DIN EN 175301-803-A ²⁾								1			
		M12x1 ²⁾ 2w: IN=1 / OUT=3 3w: IN=1 / OUT=4 / GND=3								3			
		M12x1 ²⁾ 2w: IN=1 / OUT=4 3w: IN=1 / OUT=3 / GND=4								M			
	Swift connector with cable 1.5 m								L				
Pressure connection	Inside thread	7/16 - 20 UNF								K	1	1	
		1/2 - 14 NPT								D	1	1	
	Outside thread	7/16 - 20 UNF									2	1	1
		1/4 - 18 NPT									3	1	1
		G 1/4 sealed at back DIN 3852-E with Profile seal ring in FPM									4	1	1
		G 1/2 sealed at back and manometer with Profile seal ring in FPM									8	1	1
		M20x1.5 sealed at front and manometer (combi)									E	1	1
G 1/2 sealed at front									9	1	1		
Pressure range variation (optional)	Indicate W and state range on order (e.g.: W0... + 0.3MPa/OUT0...5V)												

Accessories (Accessories supplied loose)	Order number
Female connector DIN EN 175301-803-A with seal	103510
Corner-wire box for connector M12x1	106975
Corner-wire box for connector M12x1 with cable 2.0 m	114604
Straight-wire box for connector M12x1	114570
Straight-wire box for connector M12x1 with cable 2.0 m	114605
Mounting bracket with screw	118716
Heat sink with outside thread G 1/2 sealed at front - inside thread G 1/2	105631
Heat sink with outside thread G 1/2 sealed at front - inside thread G 1/4	105073
Heat sink with outside thread G 1/4 sealed at front - inside thread G 1/4	105074
Calibration certificate	104551

Mounting bracket

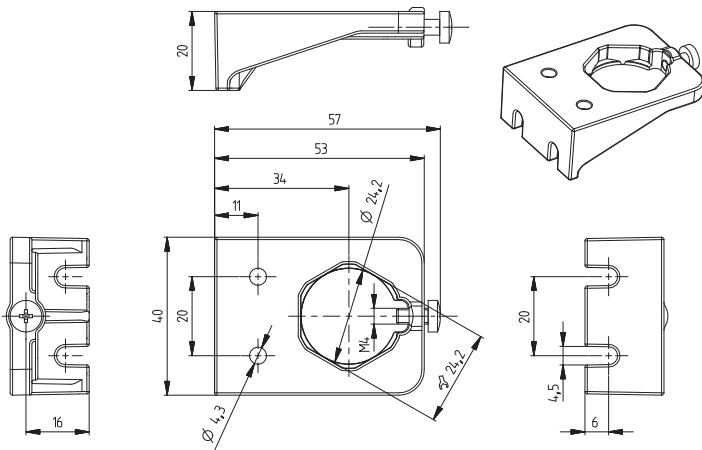


Heat sink

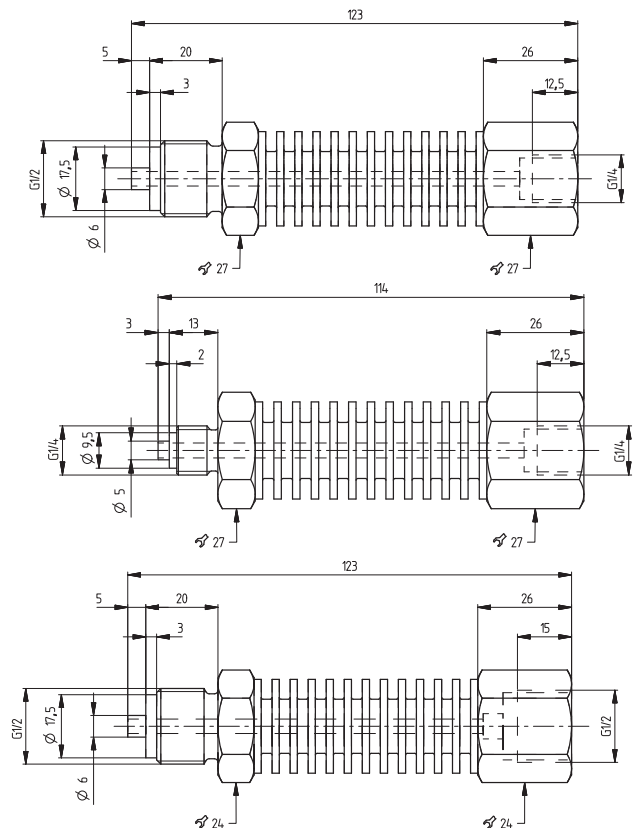


¹⁾ Other pressure ranges on request


²⁾ Delivery without female connector

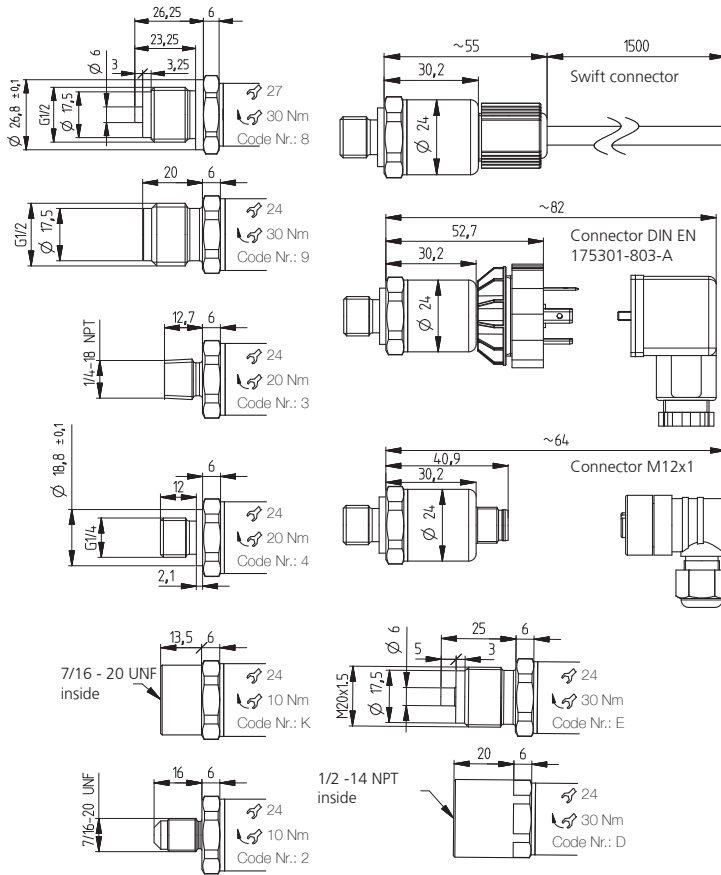


2 wire




1 (IN) 2 (OUT)



1 (IN) 2 (OUT)




1 (IN) 3 (OUT)




1 (IN) 4 (OUT)


3 wire

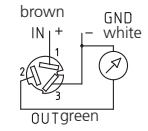


1 (IN) 2 (OUT) 3 (GND)



1 (IN) 2 (OUT) 3 (GND)



1 (IN) 4 (OUT) 3 (GND)




1 (IN) 3 (OUT) 4 (GND)




Device design with explosion protection: 4 ... 20 mA
The grounding connection is conductively connected to the transmitter housing.

Connector DIN EN 175301-803-A

Connector M12x1



1 (IN) 2 (OUT) ↓



1 (IN) 3 (OUT) 4 (↓)

¹⁾ Not connected with transmitter housing

Huba Control AG
Headquarters

Industriestrasse 17
5436 Würenlos
Telefon +41 (0) 56 436 82 00
Telefax +41 (0) 56 436 82 82
info.ch@hubacontrol.com

Huba Control AG
Niederlassung Deutschland

Schlattgrabenstrasse 24
72141 Walddorfhäslach
Telefon +49 (0) 7127 23 93 00
Telefax +49 (0) 7127 23 93 20
info.de@hubacontrol.com

Huba Control SA
Succursale France

Rue Lavoisier
Technopôle Forbach-Sud
57602 Forbach Cedex
Téléphone +33 (0) 387 847 300
Télécopieur +33 (0) 387 847 301
info.fr@hubacontrol.com

Huba Control AG
Vestiging Nederland

Hamseweg 20A
3828 AD Hoogland
Telefoon +31 (0) 33 433 03 66
Telefax +31 (0) 33 433 03 77
info.nl@hubacontrol.com

Huba Control AG
Branch Office United Kingdom

Unit 13 Berkshire House
County Park Business Centre
Shrivenham Road
Swindon Wiltshire SN1 2NR
Phone +44 (0) 1993 776667
Fax +44 (0) 1993 776671
info.uk@hubacontrol.com